



T2 Terminator Tooling Specification Sheet Part No. 63853-2000



FEATURES


- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE

Products: Right Angle, 2.00mm (.079") Board-In Terminal for 24-30 AWG.

| Terminal Series No. | Terminal Order No. | | Wire Size | | Insulation Diameter Max | | Strip Length | |
|---------------------|--------------------|------------|-----------|-----------------|-------------------------|------|--------------|-----------|
| | | | AWG | mm ² | mm | In. | mm | In. |
| 35021 | 35021-1201 | 35021-1310 | 24-30 | 0.20-0.05 | 1.50 | .059 | 1.80-2.20 | .071-.087 |
| | 35021-1300 | 35021-1360 | | | | | | |
| | 35021-1301 | | | | | | | |

DEFINITION OF TERMS

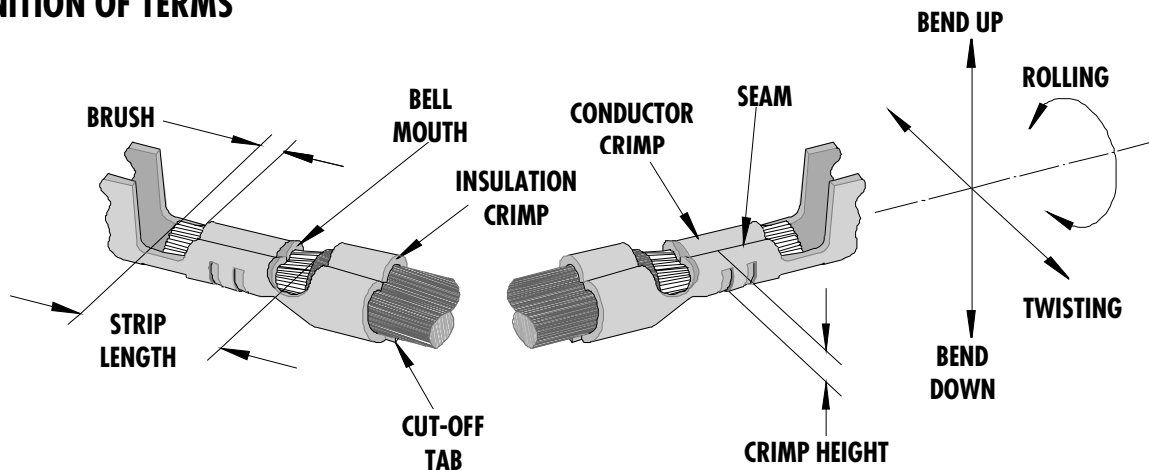

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

CRIMP SPECIFICATION

| Terminal Series No. | Bell mouth | | Cut-off Tab Max. | | Conductor Brush | |
|---------------------|------------|-----------|------------------|------|-----------------|----------|
| | mm | In. | mm | In. | mm | In. |
| 35021 | 0.20-0.50 | .008-.020 | 0.30 | .012 | 0.0-1.0 | 0.0-.039 |

| Terminal Series No. | Bend up | Bend down | Twist | Roll | Punch Width mm (Ref) | | | | Seam |
|---------------------|---------|-----------|-------|------|----------------------|------|------------|------|---|
| | | | | | Conductor | | Insulation | | |
| | Degree | Degree | mm | In | mm | In | | | |
| 35021 | 3 | 3 | 3 | 3 | 1.20 | .047 | 1.60 | .063 | Seam shall not be open and no wire allowed out of the crimping area |

After crimping, the conductor profile should measure the following.

| Terminal Series No. | Wire Size | | Conductor | | | |
|---------------------|-----------|-----------------|--------------|-----------|-------------------|------|
| | | | Crimp Height | | Crimp Width (Ref) | |
| | AWG | mm ² | mm | In. | mm | In. |
| 35021 | 24 | 0.20 | 0.75-0.80 | .030-.032 | 1.22 | .048 |
| | 26 | 0.13 | 0.75-0.80 | .030-.032 | 1.22 | .048 |
| | 28 | 0.08 | 0.68-0.73 | .027-.029 | 1.22 | .048 |
| | 30 | 0.05 | 0.65-0.70 | .026-.028 | 1.22 | .048 |

| Terminal Series No. | Wire Size | | Insulation | | | | Pull Force Min. | |
|---------------------|-----------|-----------------|--------------------|------|-------------------|------|-----------------|------|
| | | | Crimp Height (Ref) | | Crimp Width (Ref) | | | |
| | AWG | mm ² | Mm | In. | mm | In. | N | Lb. |
| 35021 | 24 | 0.20 | 1.50 | .059 | 1.70 | .067 | 29.4 | 6.60 |
| | 26 | 0.13 | 1.45 | .057 | 1.70 | .067 | 19.6 | 4.40 |
| | 28 | 0.08 | 1.40 | .055 | 1.70 | .067 | 9.8 | 2.20 |
| | 30 | 0.05 | 1.35 | .053 | 1.70 | .067 | 4.9 | 1.10 |

Pull Force should be measured with no influence from the insulation crimp.


The above specifications are guidelines to an optimum crimp.

PARTS LIST

| Terminator 63853-2000 | | | | |
|------------------------------|-----------------|------------------------|--------------------------|-----------------|
| Item | Order No | Engineering No. | Description | Quantity |
| Perishable Tooling | | | | |
| | 63853-2070 | 63853-2070 | Tool Kit (All "Y" Items) | REF |
| 1 | 63863-2002 | 63863-2002 | Conductor Punch | 1 Y |
| 2 | 63445-1213 | 63445-1213 | Conductor Anvil | 1 Y |
| 3 | 63863-2003 | 63863-2003 | Insulation Punch | 1 Y |
| 4 | 63445-1615 | 63445-1615 | Insulation Anvil | 1 Y |
| 5 | 63443-0003 | 63443-0003 | Cut-Off Plunger | 1 Y |
| 6 | 63443-0012 | 63443-0012 | Front Plunger Retainer | 1 Y |
| Other Components | | | | |
| 7 | 11-18-4083 | 60707-8 | Front Cover | 1 |
| 8 | 11-24-1067 | 4996-4 | Cut-off Plunger Spring | 1 |
| 9 | 11-40-4039 | 8302-5 | Front Plunger Striker | 1 |
| 10 | 63443-0009 | 63443-0009 | Scrape Chute | 1 |
| 11 | 63443-0021 | 63443-0021 | Lower Tooling Key | 1 |
| 12 | 63443-2411 | 63443-2411 | Anvil Mount | 1 |
| 13 | 63443-4029 | 63443-4029 | Wire Stop | 1 |
| 14 | 63445-1613 | 63445-1613 | Spacer Anvil | 1 |
| 15 | 63443-6001 | 63443-6001 | Rear Cover | 1 |
| Frame | | | | |
| 16 | 63800-8500 | 63800-8500 | T2 Terminator | 1 |
| Hardware | | | | |
| 17 | N/A | N/A | M3 by 6 Long SHCS | 2** |
| 18 | N/A | N/A | M4 by 6 Long SHCS | 1** |
| 19 | N/A | N/A | M4 by 10 Long BHCS | 2** |
| 20 | N/A | N/A | M4 by 16 Long SHCS | 1** |
| 21 | N/A | N/A | M4 by 20 Long SHCS | 1** |
| 22 | N/A | N/A | M4 by 50 Long SHCS | 1** |
| 23 | N/A | N/A | 3MM by 6 Long Roll Pin | 1** |
| 24 | N/A | N/A | #10-32 by 1/4" Long BHCS | 1** |

** Available from an industrial supply company such as MSC (1-800-645-7270).

Assembly Drawing

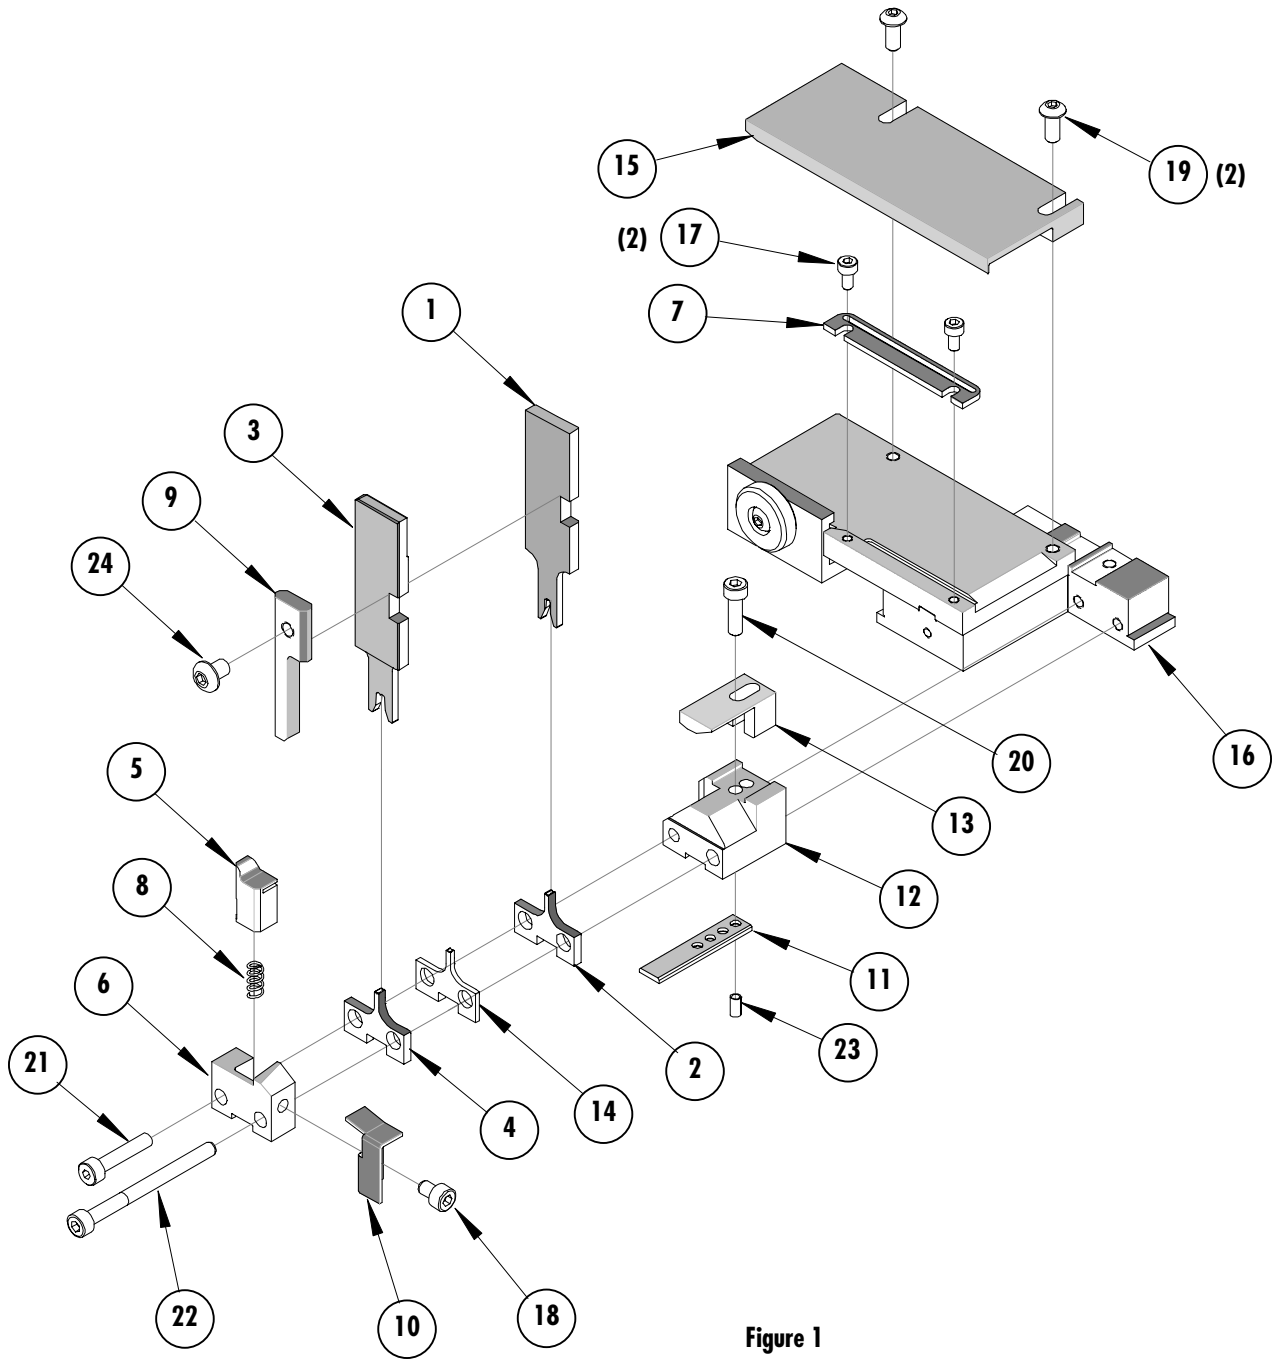

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
2. Select T2 Feed finger assembly from Terminator box.
3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
5. Release the feed arm spring.
6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

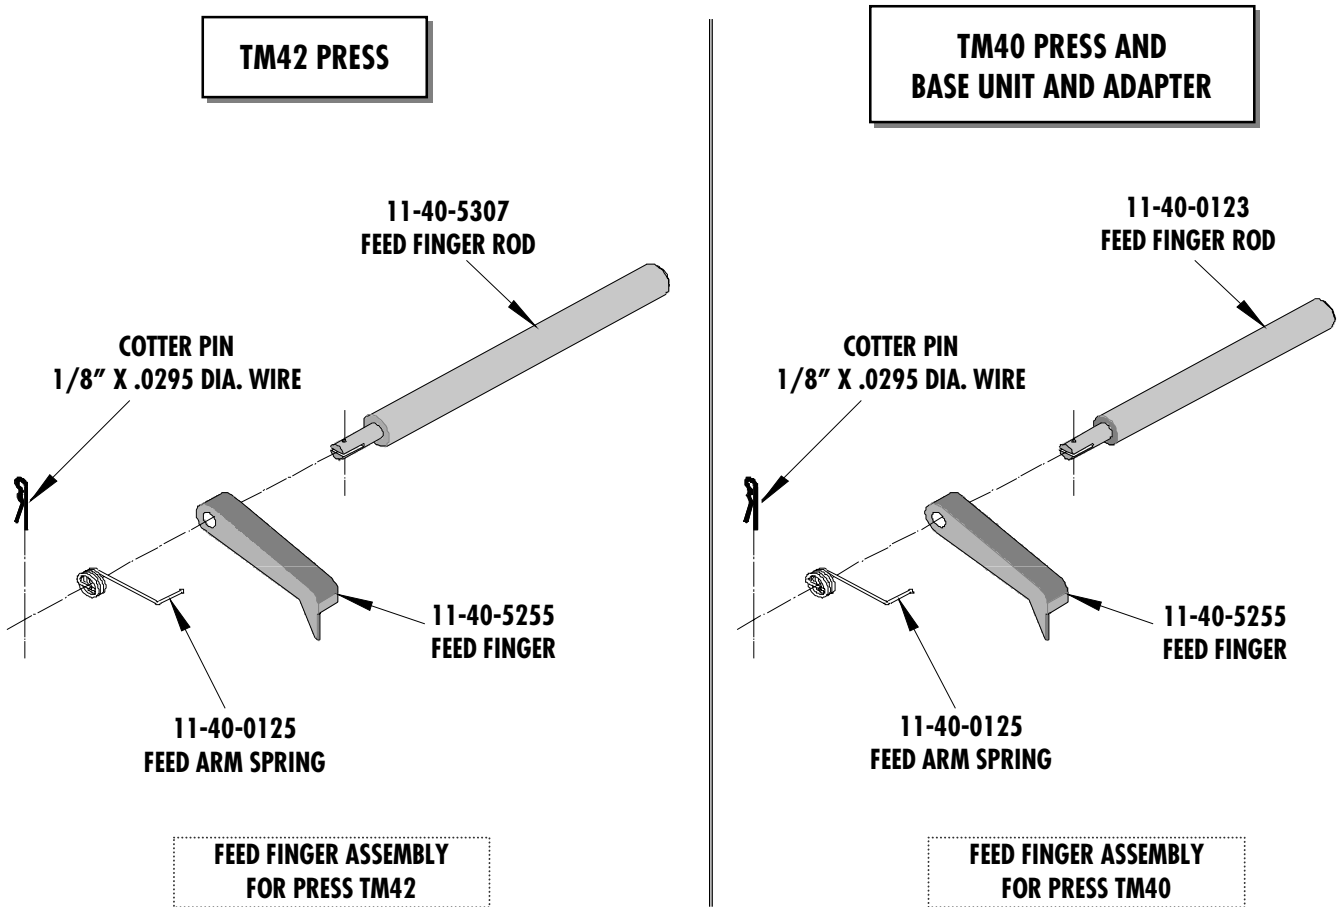


Figure 2

NOTES

1. Molex recommends an extra perishable tooling kit be maintained at your facility.
2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
5. Wear safety glasses at all times.
6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters

Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters

Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters

Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters

Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters

2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>